

DIAPER CHANGING STATION

TBC 110, TBC 210




Diaper Changing Station

JAVA
Invitation to the Digital Revolution



TBC110(Vertical)

820(W)*550(H)*145(D)

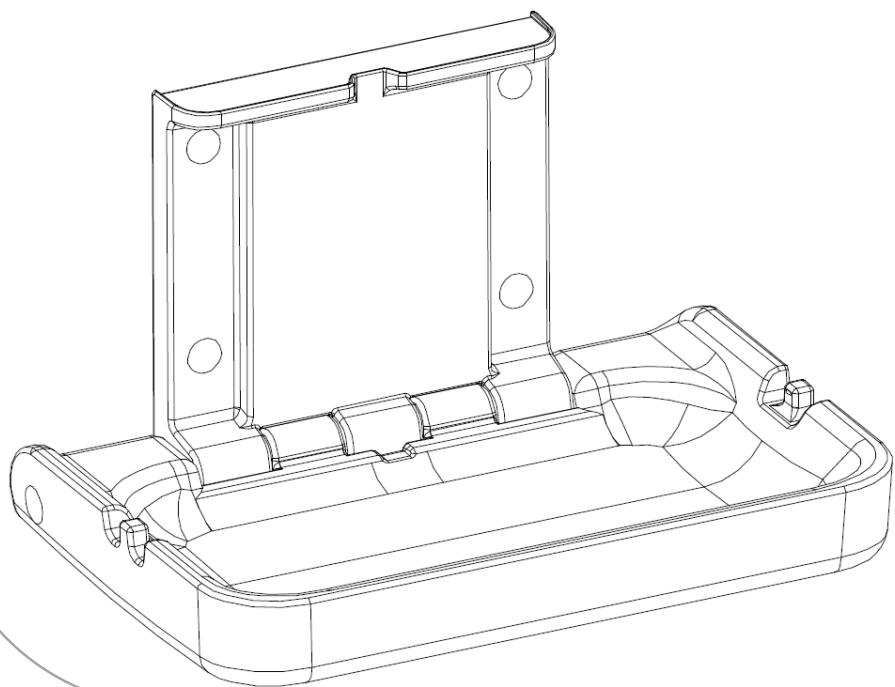


Diaper Changing Station

JAVA
Invitation to the Digital Revolution

TBC210(Horizontal)

550(W)*860(H)*145(D)

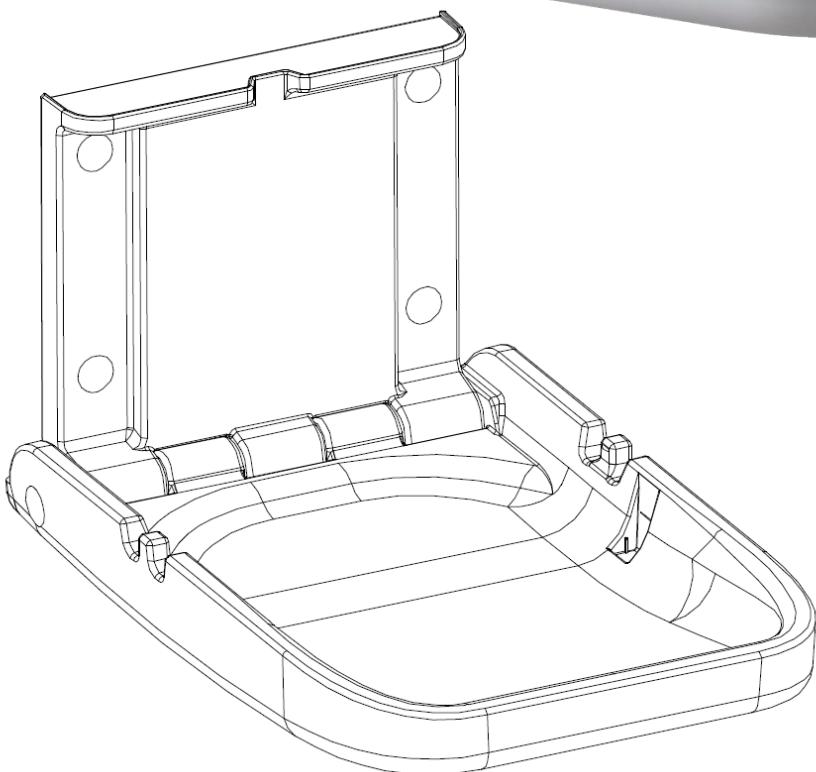


Diaper Changing Station

JAVA

Invitation to the Digital Revolution

Extra Parts

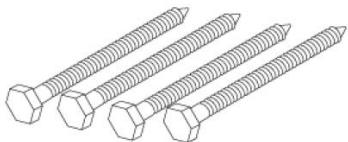

Nuts



Nylon Anchor



Washer



Lid

English Section Manual

English Stickers

T5 JAVA CO., LTD. 40, Anam 1-gil, Seongbuk-gu, Seoul, 02816, Rep. of KOREA Tel.: +82 2 774 0599 Fax: +82 2 774 0599

Diaper Changing Station

JAVA www.java.com

1. Safety Warning

Warning

If notice with this sign is disregarded or misused, users may be hurt or property damage can be occurred.

1. Never leave baby alone without guardian.
2. Be sure to fasten the seatbelt to baby in use, if not, baby could be seriously wounded.
3. It must be regularly inspect and tight all the nuts, spire parts and mounting tools.
4. Never lose the cover of nut, if baby's cloth or body is stuck in the space, baby could be wounded seriously.
5. Do not install the product close to electric heater, electric fire, a radiator and furnace.
6. Check the seatbelt which is combined with product solidly.
7. Available baby weight under 15kg.
8. Features of product
9. Product of the product
10. Warning for installation
11. Packing
12. Installation Method
13. Construction Drawing
14. Repair and Inspection

6. Installation Method

- Installation height is 900mm from the floor.
- And drilling #10 and then insert the nylon anchor and tighten the screw length 5mm.
- Construct the product with supporting box.
- Diaper Changing Station**

Wall Nylon Anchor

7. Construction Drawing

Free Repair Regulation

Repair and Inspection

8. Repair and Inspection

When open and start the product, is there any rattling noise?
Does the door open and close smoothly?
Does any damage on the buckle?
When buckle pull out, buckle come off?
Can you clearly identify?

9. In case of user find the abnormality, suspend the use then contact the authorized retail store.



A small illustration of a brown teddy bear sitting upright, facing forward, with its arms crossed over its chest.

*Infant Protection Seat
Only age 18 months or under.
Always buckle-up baby on seat
and fasten securely.*